


# **OPERATING GUIDE**

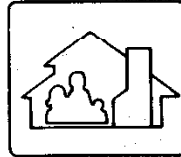

## **FOR YOUR**



# **MAGNUM ALERT-825/ MAGNUM ALERT-825HS SECURITY SYSTEM**



**NAPCO**



## CONGRATULATIONS


Please read this guide thoroughly to familiarize yourself with your new security system. Keep this booklet handy for future reference. Note especially the ALARM PLAN on page 15. Your alarm specialist will help you fill it out and explain the various features and operating procedures for your new Magnum Alert-825/825HS.

### NOTICE

You'll probably find items mentioned in this booklet which do not apply to your system. DONT WORRY!

The Napco Magnum Alert-825/825HS has such a wide variety of features that few, if any, security systems will ever need them all. Your alarm professional has chosen appropriate features for your situation. Ask him about them.

Your Magnum Alert-825/825HS is carefully designed and engineered to the highest industry standards. To provide optimum safety and security with this equipment, we recommend that the user become thoroughly familiar with the unit and periodically check its condition and state of readiness.

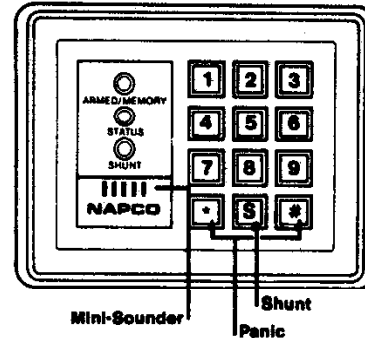

The face of the keypad lifts up to reveal a convenient index of protected zones.

# GLOSSARY OF TERMS



## **Abort Delay**

A delay period that allows the system to be reset before it reports to a central station.

## **Alarm Plan**

Identifies the areas of your premises protected by each zone of protection and lists zone features. (See page 15)

## **Ambush Code**

A one or two-digit code used before an arm/disarm code that causes a silent report to be sent to a central station. (Optional)

## **Arming/Disarming**

Turning your system ON or OFF. This can be done by entering a code on the Digit-Key keypad, or by turning an optional key-switch.

**Arm/Disarm (Personal) Codes**  
Up to 4 four-digit codes used to arm and disarm the system from the keypad.

## **Battery**

Standby battery is placed in the Control Center box to provide backup protection in the event of a power loss.

## **Central Station**

Monitors incoming burglary and emergency messages from the Digital Communicator, and alerts the proper authorities. (Optional feature)

## **Control Center**

The heart of the Magnum Alert-825 security system; it controls all system functions.

## **Digital Communicator**

Reports burglary and emergencies directly to the central station over telephone lines.

## **Digital Keypad**

Napco's Digit-Key keypad puts Control Center functions at your fingertips. It can be mounted either at the Control Center or anywhere in your premises.

## **Exit/Entry Delay**

Lets you exit and enter your premises without setting off an alarm after the system is armed.

## **Hold Down Function**

Digit keys have secondary functions which are activated by holding down a digit until a beep is heard.

## **Fallback Code**

A pre-programmed four-digit code that may be used to disarm your system should all user codes be erased (as after an extended power failure).

## **Mini-Sounder**

Buzzer at each Napco Digit-Key keypad warns that entry delay time has started. It also sounds when you attempt to arm the system if a particular zone is in "trouble". It also verifies contact with a central station when a closing signal is sent (optional).

## **Panic Buttons**

Two buttons (\* and #) on the Digit-Key keypad which will alert the central station of an emergency.

## **Report**

A communication sent to a central station indicating a specific change in condition of

the security system (alarm, trouble, low battery, etc.). (optional)

## **Shunt Button**

Labelled "S" on the Digit-Key keypad. Lets you manually remove one or more protective zones from the system.

## **Zones**

Independent circuits that protect specific areas of your premises.

**Auto Shunted Zone:** A zone capable of being automatically bypassed (shunted) out of the protection system if it is in "trouble" (faulty) when you attempt to arm the system.

**Burglary Zones:** Detect intrusion.  
**Day Zone:** A zone programmed to cause visual and audible (optional) indication at the Digit-Key keypad when it is in "trouble" during the disarmed period.

**Exit/Entry Follower Zone:** Provides exit and entry delay for interior devices. Entry delay only occurs if re-entry takes place through the normal exit/entry door.

**Group Shunt Zones:** A group of zones programmed so they can be manually bypassed (shunted) all at once.

**Priority Zones:** When a zone selected for the feature is in "trouble" it will be impossible to arm the Control Center.

**Selective Shunted Zones:** Zones that can be individually bypassed (shunted) using the Shunt Button.

**Trouble Zones:** Zones that cannot be armed because of an open window, door or other problem in the area.

**24 Hour Zones:** Are always armed and ready at all times to respond to an emergency situation.



# CONTROLS

## Indicator Lights

### ARMED/MEMORY (Red)

- Steady - system is armed.
- Flashes - alarm condition. Flashes indicate the number of zone(s) which were violated. (see page 5, Key 2)

### STATUS (Green)

- Steady - system is disarmed, all zones okay.
- Flashes - a non-24 hour zone is in trouble. Flashes indicate the number of the zone(s) that are in trouble. *Note: to stop flashing hold down Key 3 for two seconds.*

### SHUNT (Yellow)

- Steady - one or more zones manually shunted (bypassed).

**NOTE:** all three lights flashing together indicates that AC power has been lost. Reset indication with Key 9 (see page 5).


## Mini-Sounder

- Steady Tone: day zone in trouble; entry delay in progress; system armed with a priority zone in trouble.
- Beep (2 seconds): system armed with any zone auto shunted; or battery power low.

## Arm-Disarm/Run/Load Switch

- Used to load (program-in) user arm/disarm codes. Slide switch to the right (LOAD) position when entering codes (refer to Selecting Your Codes on page 7).

Be sure to return the switch to the center (RUN) position after all codes have been entered. Setting this spring-return switch to the left will also arm or disarm the system (unless this option has been removed). Your system will not operate with the switch in the LOAD position.

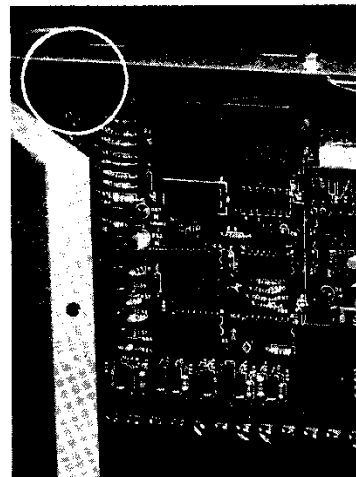



## Keys

**NOTICE:** Keys 1, 2, 3, 4, 5, 9 and S must be held down for 2 seconds (until mini-sounder beeps) to perform their designated "Hold-Down" ("Key") functions.

### Key 1: TEST

Momentarily sounds the burglar alarm from the battery. If no alarm is heard, or if it is weak, the battery may need replacing. Use this test weekly. (To perform this function the key *must* be held down until a beep is heard.)

### Key 2: ALARM HISTORY

This will flash the red ARMED/MEMORY light to indicate the last alarm condition. Count the number of flashes to determine the zones violated. This feature does not reset; after the system is rearmed, the previous alarm history will remain in alarm memory until automatically reset by a new alarm condition. To perform this function the key *must* be held down until a beep is heard, and then continued to be held down until all information has been displayed.

### Key 3: STATUS INDICATION RESET

This will stop the green STATUS light flashing. To turn STATUS flashing back on, hold down Key 3 again. (To perform this function the key *must* be held down until a beep is heard.)

### Key 4: INSTANT PROTECTION

Cancels the exit/entry delay periods when arming. The delay is restored after you disarm the system. See page 10. (To perform this function the key *must* be held down until a beep is heard.)

### Key 5: DOOR CHIME

This will initiate a feature that sounds a chime in the keypad each time the entry door on zone 1 is opened. This feature only works when the alarm system is disarmed (off). To eliminate the door chime feature, press this key again. A lengthy "chime" may be reset using Key 9 (MA-825HS only). (To perform these functions, the key *must* be held down until a beep is heard.)

### Key 9: RESET

Used to reset a Day Zone Mini-Sounder indication (MA-825HS only), a lengthy door "chime" (MA-825HS only), or the AC Failure indication (all three indicators flashing), and to bypass a troubled zone designated as a "Priority with Bypass Zone." (To reset any function, the key *must* be held down until a beep is heard.)

### Key S: SHUNT

This will flash the yellow SHUNT light to indicate the zone(s) shunted. Count the number of flashes to determine the zone(s) shunted.

To perform this function the key *must* be held down until a beep is heard, and continued to be held down until all information has been displayed. The key does not have to be held down for either the Selective Zone Shunting feature (see page 10) or when selecting a new code (see page 7).

### Keys \* and #: PANIC BUTTONS

Activates the panic zone. Refer to "Panic Zone", page 10 for more information.



# UNDERSTANDING YOUR SECURITY SYSTEM

Your Magnum Alert-825/825HS Security System has three basic components:

## 1. Zones

Your system is capable of monitoring up to six separate areas of your premises, including Ambush/Panic and Auxiliary zones.

Each zone is an independent circuit that protects a specific area of your premises. For example: your alarm specialist may have set aside a zone for window protection, exit/entry delay, interior space protection, safe and valuables protection or emergencies. Each zone can be "programmed" to react in a specific manner. Check and be certain that you know what each zone protects.

## 2. The Digit-Key Keypad

Lets you program arm/disarm codes; arm and disarm the system; check the condition (status) of each zone; temporarily bypass (shunt) individual (or group of) zones; send an ambush alarm; cancel exit/entry delay; test the battery and alarm devices; reset the AC-failure indication; and bypass a Priority-with-Bypass Zone.

Three lights and a Mini-Sounder on the Digit-Key keypad monitor the system.

## 3. The Alarm Output

When any zone is activated, the Control Center responds by sounding an audible alarm and/or alerting a central station (optional). Your alarm specialist has programmed your system to react in a specific manner to each type of emergency. Be sure you understand how your system responds to these emergencies.

# USING YOUR SECURITY SYSTEM



## The Digit-Key Keypad

All security system operations are carried out at the keypad. Each key has a special function of its own (see "CONTROLS" page 5) plus the ability to arm and disarm the system when they are used in a pre-selected combination (codes).

## Personal (Arm/Disarm) Codes

You can choose up to 4 four-digit codes which will allow you to arm and disarm your system. Any of these codes can easily be changed, thus allowing temporary guests, babysitters, employees, etc., access to the premises. When no longer needed, the codes can be changed or removed from service.

Your security system cannot be disarmed by unauthorized persons. It will respond only when a code of your choosing is entered through the keypad.

## Selecting Your Codes

To program these codes, slide the ARM-DISARM/RUN/LOAD switch (upper left corner of the Control Center, see page 4) to the right (LOAD). The three lights on the keypad will flash rapidly, and the Mini-Sounder will beep. At the keypad, enter any combination of up to four digits (there is no zero) as follows:

Press:

- S + 1 + Four digit First User's Personal Code
- S + 2 + Four digit Second User's Personal Code
- S + 3 + Four digit Third User's Personal Code
- S + 4 + Four digit Fourth User's Personal Code

After all user codes have been entered, return the ARM-DISARM/RUN/LOAD switch at the Control Center to the center (RUN) position. Remember: your system will not operate with the switch in the LOAD position.

*NOTE: You need not assign all four codes. Use only as many as you*

*need, and change them as often as you feel necessary (refer to Changing or Voiding a Code).*

## Easy Arming

(MA-825HS only)

If programmed, this feature permits quick arming by momentarily pressing Key 8. Disarming, however, will still require entry of a complete code.

## Changing or Voiding a Code

Changing any user's code is accomplished by using the foregoing procedure and simply changing the 4-digit combination. Thus, to change User 3's code:

1. Set the ARM-DISARM/RUN/LOAD switch to LOAD.
2. Press S + 3 + Four new digits, user 3's new code.
3. Return the ARM-DISARM/RUN/LOAD switch to RUN.



## PROTECTING YOUR PREMISES WHILE YOU ARE AWAY

### Checking AC Power

If the three lights of your keypad are blinking slowly, you have lost AC power. Check to see if there has been a general power outage, or if the Control Center's transformer is disconnected. If you must operate without AC power, press Key 9 to stop the lights from blinking. Next, test your standby battery by pressing Key 1. If the alarm doesn't sound, or is weak, replace the battery. Check your battery weekly.

### Arming The System Before You Leave

Before you attempt to arm the system, check the STATUS light on the keypad. If the light is on, you may enter your code, but be prepared to leave immediately. Upon arming, the red ARMED/MEMORY light will come on and the green STATUS light will go out. Leave immediately through the exit/entry door before the exit-delay time runs out. If you take too long to leave the premises, the Mini-

Sounder will warn you that exit-delay time has expired and entry-delay time has started. To avoid causing an alarm, quickly return to the keypad and enter your code to disarm the Control Center. You may then rearm and try to exit again.

### System Does Not Respond to Personal Code

If after an extended power failure your personal codes do not work, you can temporarily use the "Fall-back" code to operate the system. To restore personal codes, see page 7 "Selecting Your Codes".

### Arming With A Zone In Trouble

If the green STATUS light is flashing, at least one non-24 Hour Zone is in trouble (in an open or shorted condition) and incapable of being armed. Count the number of flashes to determine the zone(s) in trouble. For example, if your back door is open on Zone 1 and a window is open on Zone 3, the STATUS lamp

will flash once for Zone 1; pause; then flash three times for Zone 3. Try to clear the troubled zone(s) yourself. In this example you can clear the zones by merely closing the back door and the window.

If the zone cannot be fixed (green light still flashing), it may still be possible to arm the system without the protection of that zone. Check your Alarm Plan (see page 15). If the zone in trouble is not designated as a Priority Zone, you will be able to arm your system anyway. A 2-second beep at the keypad Mini-Sounder will alert you that the system was armed with a zone automatically bypassed (auto-shunted) and no alarm will occur. Be sure to have all zones in trouble repaired as soon as possible! If you cannot clear the zone yourself, call your alarm specialist.

You cannot arm your system if a zone programmed as a Priority Zone is in trouble. The Mini-Sounder will come on, but the ARMED/MEMORY light will not. To silence the sounder, re-enter your code to disarm.





If trouble is encountered on a zone programmed as a Priority-with-Bypass Zone however, enter your code to silence the Mini-Sounder and disarm; hold down Reset Key 9 until it beeps (this will bypass the alarm condition); then enter your code to rearm.

### **Disarming When You Return**

When you enter through the exit/entry door, the Mini-Sounder will come on during the entry period to remind you to disarm. Check the red ARMED/MEMORY light; if it is flashing, an alarm occurred while you were out. Using your code, disarm the system immediately during the entry period to prevent an alarm and to silence the Mini-Sounder.

**NOTE:** *If you enter the wrong code, you must wait at least 2 seconds before re-entering. If there was an extended power failure and your system does not respond to your correct code, enter your pre-programmed "Fallback" code to disarm. See page 8.*

To identify which zone(s) were violated, hold down Alarm History Key 2 until it beeps. The red ARMED/MEMORY light will flash to indicate the last alarm condition. Count the number of flashes to determine which zone(s) require attention.

**NOTE:** *If an alarm occurred and the red light did not flash, a 24 Hour Zone (see your Alarm Plan) was violated. The cause of the alarm must be determined and cleared before you can rearm your Control Center.*

### **Ambush Code (optional)**

If an intruder forces you to disarm your system, enter your preprogrammed 1- or 2-digit Ambush Code before your disarm code. This activates your Ambush Zone, which is usually programmed to send a silent alarm to a central station (optional feature). If your system is monitored by a central station, be sure to memorize your ambush code.



## PROTECTING YOURSELF WHILE YOU ARE ON PREMISES

### Arming With Selective Zone Shunting

Your alarm specialist may have opted for one or more zones that can be selectively shunted (removed) from the system. Since a shunted zone cannot cause an alarm, you may wish to use this feature to turn OFF the interior areas while arming, and keeping your perimeter zones (windows, doors, etc.) active.

To arm, check the green light to make sure no zone is in trouble. Press the shunt button (labeled "S"), and then the number of the zone (1 through 6) you wish to shunt

Your alarm specialist may also have opted for interior zones to all be "group shunt" zones. Shunt these zones simply by pressing the "S" key twice. The yellow shunt light will come ON whenever you shunt one or more zones. Enter your arm/


disarm code to arm your remaining zones. The green light will go OFF, and the red ARMED/MEMORY light will come ON. The yellow light will go OFF when you disarm again indicating that the shunted zones are no longer shunted. (Note: The shunt light does NOT come on when zones are auto-shunted.)

### Arming With Instant Protection

Pressing key 4 (until you hear a beep) will cancel the exit/entry delay on the exit/entry zone when arming. The red ARMED/MEMORY light will flash rapidly to indicate this condition. If someone enters through the exit/entry zone, an alarm will sound immediately.

### Panic Zone


To activate the panic zone, simultaneously press the two keys marked \* and # on the Digit-Key keypad. The panic zone can be programmed to send a silent alarm to a central station, activate an audible alarm, or both.

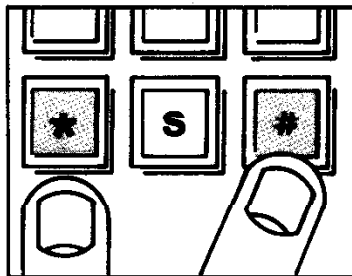

# USING THE DIGITAL COMMUNICATOR



Your Alarm Specialist may have programmed your security system to be monitored by a central station. The built-in digital communicator can transmit emergency signals to the central station 24 hours a day.

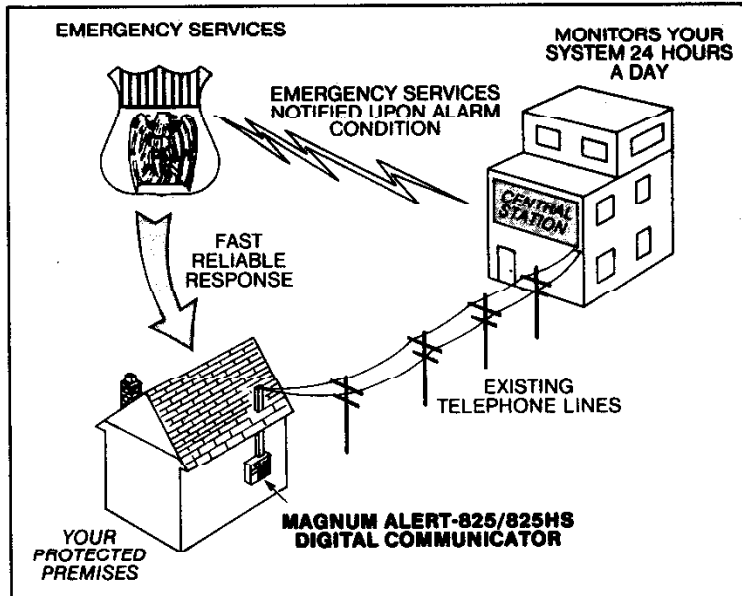

TEAR HERE



## COMMUNICATOR FEATURES

### **Abort Delay**

Note which zones on your alarm plan have abort delay. This is a delay that enables you to reset the system before a zone condition report is sent to the central station. Non-24 hour zone reports are aborted by arming and then disarming. 24 hour zones, however, must first be repaired.

### **Opening and Closing Reporting**

An optional feature that permits the central station to receive a signal each time the system is armed, disarmed or both (up to 4 individual users can be identified).

### **Central Station Ringback**

The central station will acknowledge the fact that you have armed your system by "ringing back" with a short beep from the Mini-Sounder. (This is an optional feature that responds to closing reports only.)

# FIRE PROTECTION



The following information is applicable only where local ordinance permits use of your alarm Control Center for fire detection.

## Controlling Your Fire Circuit

If your alarm specialist installed smoke detectors or heat sensing thermostats, you have 24 hour fire protection. This optional Fire Protection Zone is always active, even though your system may be disarmed. An optional Fire Supervision and Indicator Station on the Control Center provides the following fire circuit controls.

## AC Power Check

If the yellow AC light on the Fire Supervision and Indicator Station is off, the Control Center is not receiving AC power. Press the spring-loaded SILENCE & FIRE RESET switch to shut off the Mini-Sounder. Check lights to see if there is a

general power outage. If there is, you will be operating from your standby battery. When AC power is restored, the Mini-Sounder will come back on. Press the spring-loaded switch again to silence the Mini-Sounder.

## Fire-Zone Check

The Mini-Sounder on the Fire Supervision and Indicator Station signals a problem on the Fire Zone. Press the spring-loaded SILENCE & FIRE RESET switch to shut off the Mini-Sounder. The red TROUBLE light will come on until the Fire Zone is cleared. When the zone is restored, the Mini-Sounder will signal again to indicate that the Fire Zone is functional. Press the SILENCE & FIRE RESET switch once again to turn off the Mini-Sounder.

**NOTE:** If there is no Fire Supervision and Indicator Station on your Control Center and your Fire Zone uses smoke detectors, have your alarm specialist show you and explain the switch he has installed for resetting the smoke detectors after an alarm.

## Fire-Detector Reset

After a fire alarm, the red FIRE ALARM light will be on. Press the SILENCE & FIRE RESET switch to clear the smoke detectors.

## Alarm/Battery Test

The fire alarm bell/siren and standby battery should be tested weekly. Disarm the Control Center. Push the BATTERY & BELL TEST switch down and listen to the bell/siren. If the alarm sounds weak, the battery is faulty. Call for service.

## Would You Like More Safety Information?

For information on home fire detection, burn safety, and home fire safety, contact the National Fire Protection Association, Public Affairs Dept. 05A, Batterymarch Plaza, Quincy, MA 02269.



## PREPARING AN ESCAPE PLAN


Even with the most advanced fire alarm system, adequate protection requires an escape plan. To prepare your plan:

Draw floorplans of your building. Show two exits - a front or back door and a window from each room. (Make sure the window works. You may need a special fire escape ladder if the window is high up.) Write down your outside meeting place.

### Family Rehearsal

Rehearse each of the following activities:

- 1) Everyone in their room with the doors closed.
- 2) One person sound the alarm.
- 3) Each person tests his door.
- 4) Pretend the door is hot and use the alternate escape exit.
- 5) Everyone meet outdoors at the assigned spot.

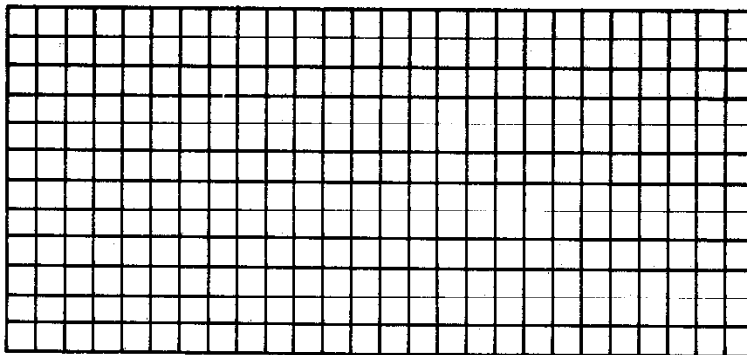

### IMPORTANT! - Read Carefully

Discuss these escape procedures with those who use the building.

**1)** In a residence, sleep with the bedroom door closed. A closed door will hold back deadly smoke while you escape.

**2)** When the fire alarm signals, escape quickly. Do not stop to pack.

**3)** Test the door. If it is hot, use your alternate route through the window. If the door is cool, brace your shoulder against it and open it

cautiously. Be ready to slam the door if smoke or heat rush in. Crawl through smoke, holding your breath. Close the doors again on leaving to help prevent the fire from spreading.

**4)** Go to your specific outdoor meeting place so you can see that everyone is safe.

**5)** Assign someone to make sure nobody returns to the burning building.

**6)** Call the fire department from a neighbor's telephone.

# ALARM PLAN



<b>Zone</b>	<b>Area Protected</b>	<b>Zone Features</b>	<b>Contacts (doors, windows, etc.)</b>
1			
2			
3			
4			
5			
6			

**Central Station** \_\_\_\_\_ **Telephone** \_\_\_\_\_  
(Optional)

**Service Person** \_\_\_\_\_ **Telephone** \_\_\_\_\_

## NAPCO LIMITED WARRANTY

NAPCO SECURITY SYSTEMS, INC. (NAPCO) warrants its products to be free from manufacturing defects in materials and workmanship for fifteen months following the date of manufacture. NAPCO will, within said period, at its option, repair or replace any product failing to operate correctly without charge to the original purchaser or user.

This warranty shall not apply to any equipment, or any part thereof, which has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to acts of God, or on which any serial numbers have been altered, defaced or removed. Seller will not be responsible for any dismantling or reinstallation charges.

In case of defect, contact the security professional who installed and maintains your security system. NAPCO shall have no obligation under this warranty, or otherwise, if the product has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to accident, nuisance, flood, fire or acts of God, or on which any serial numbers have been altered, defaced or removed. NAPCO will not be responsible for any dismantling, reassembly or reinstallation charges.

In order to exercise the warranty, the product must be returned by the user or purchaser, shipping costs prepaid and insured to NAPCO. After repair or replacement, NAPCO assumes the cost of returning products under warranty.

There are no warranties, express or implied, which extend beyond the description on the face hereof. There is an express or implied warranty of merchantability or a warranty of fitness for a particular purpose. Additionally, this warranty is in lieu of all other obligations or liabilities on the part of NAPCO.

Any action for breach of warranty, including but not limited to any implied warranty of merchantability, must be brought within the six months following the end of the warranty period. In no case shall NAPCO be liable to anyone for any consequential or incidental damages for breach of this or any other warranty, express or implied, even if the loss or damage is caused by the seller's own negligence or fault.

This warranty contains the entire warranty. It is the sole warranty and any prior agreements or representations, whether oral or written, are either merged herein or are expressly cancelled. NAPCO neither assumes, nor authorizes any other person purporting to act on its behalf to modify, to change, or to assume for it, any other warranty or liability concerning its products.

### THE FOLLOWING STATEMENT IS REQUIRED BY THE FCC.

This equipment generates and uses radio-frequency energy and, if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class-B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be

In no event shall NAPCO be liable for an amount in excess of NAPCO's original selling price of the product, for any loss or damage, whether direct, indirect, incidental, consequential, or otherwise arising out of any failure of the product. Seller's warranty, as hereinabove set forth, shall not be enlarged, diminished or affected by and no obligation or liability shall arise or grow out of Seller's rendering of technical advice or service in connection with Buyer's order of the goods furnished hereunder.

NAPCO RECOMMENDS THAT THE ENTIRE SYSTEM BE COMPLETELY TESTED WEEKLY.

**Warning:** Despite frequent testing, and due to, but not limited to, any or all of the following: criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. NAPCO does not represent that the product/system may not be compromised or circumvented; or that the product or system will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; nor that the product or system will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce risk of burglary, robbery, fire or otherwise but it is not insurance or a guarantee that these events will not occur. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. Therefore, the installer should in turn advise the consumer to take any and all precautions for his or her safety including, but not limited to, fleeing the premises and calling police or fire department, in order to mitigate the possibilities of harm and/or damage.

NAPCO is not an insurer of either the property or safety of the user's family or employees, and limits its liability for any loss or damage including incidental or consequential damages to NAPCO's original selling price of the product regardless of the cause of such loss or damage. If the user wishes to protect itself to a greater extent, NAPCO will, at user's sole cost and expense, obtain an insurance policy to protect the user, supplemental to user's own policy, at a premium to be determined by NAPCO's insurer upon written notice from user by Certified Mail, Return Receipt Requested, to NAPCO's home office address, and upon payment of the annual premium cost by user.

Some states do not allow limitations on how long an implied Warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, or differentiate in their treatment of limitations of liability for ordinary or gross negligence, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient the receiving antenna; relocate the computer with respect to the receiver; move the computer away from the receiver; plug the computer into a different outlet so that computer and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful: "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402; Stock No. 004-000-00345-4.